# **BASIS** gas flow instruments for OEM projects

Tiny • Durable • Dosing-Ready





# **Specifications**

#### Mass Flow Accuracy

Compatible gases	Air, N2, O2, CH4	He, H <sub>2</sub>	Ar	CO₂, N₂O
Mass flow accuracy	± 1.5% reading or ± 0.2% full scale	± 1.8% full scale	± 1.5% reading or ± 0.5% full scale	100 SCCM – 2 SLPM: ± 1.5% reading or ± 0.5% full scale 5 SLPM – 20 SLPM: ± 2.0% reading or ± 1.0% full scale 50SLPM – 100 SLPM: ± 3.0% reading or ± 2.0% full scale

#### Sensor and Control Performance

Repeatability (2σ)	± 0.25% reading or ± 0.05% of full scale		
Control and measurement range	0.1% – 100% of full scale (1,000:1 turndown ratio)		
Temperature sensitivity	Mass flow zero and span shift: 0.05% of reading per °C from calibration conditions		
Operating temperature	0-50°C		
Temperature accuracy	±1.5 °C		
Typical control response time	As fast as 100ms		
Typical warm up time	1 minute		

Max Ranges	Dimensio	Weight		
	Depth	Width	Height	
400 2	0.88″	2.70″	1.55″	≈ 4.0 oz
100 sccм – 2 slpм	22.23 mm	68.6 mm	39.4 mm	≈ 116 g
5 c. p	1.00″	3.31″	1.83″	≈ 6.0 oz
5 SLPM – 20 SLPM	25.4 mm	84.0 mm	46.5 mm	≈ 171 g
50 51 51 100 51 511	1.38″	4.52″	2.06″	≈ 12.5 oz
50 slpm – 100 slpm	35 mm	114.8 mm	52.3 mm	≈ 355 g

Automate your manual process. Eliminate guesswork and manual adjustments

Run sophisticated flowcontrol scripts using fast, robust MODBUS, ASCII, or use analog control

LED indicator shows power, active communications, and error states

Common industrial process port options

Dosing and batches with a built-in totalizer

Calibrated to flow any of 9 gases, including hydrogen



Compact and durable metal flow body

MFCs with embedded valve

# **Applications**

### Sophisticated features



Communicates with our free FlowVision 2.0 software

- Powerful companion Flowvision 2.0 software for programming scripts, collecting data, and connecting multiple instruments in a process.
  Or use the built-in MODBUS or ASCII protocols.
- ▶ Built-in flow temperature measurement get better, more relevant process data.
- ► Programmable setpoint ramping—let the instrument do the heavy lifting.
- Valve overrides—protect and control your process.
- ▶ Programmable communication watchdog automated valve close when communication is lost.
- Advanced statistics reporting such as min, max, average, std deviation—more data, better insights.

#### Customize configurations

Talk to our engineers about configuring to suit your project




Rapid prototype of compact manifolds and gas mixing designs



Custom down ports or machined fittings

#### Custom gas or aerosol mixing

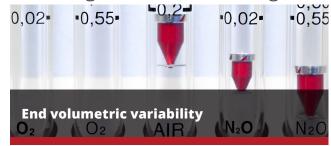

BASIS MFCs batch function ensures proportional rates to make gas mixtures. Get the right molar mix regardless of changes in upstream/downstream pressure, or environmental conditions. For atomizing and carrier gases, ensure a consistent flow.

#### Chemical processes



Repeatable and scalable flow control is crucial to achieving high titers from upstream bio processes. BASIS flow controllers easily integrate into data systems.

#### Analytical equipment



Enable full system stability and ensure accurate compound detection by tightly regulating carrier gas flow.

#### Industrial processes



BASIS mass flow devices are used in burners to control gases that heat the glass, as well as with shielding gases, and controlling thin film deposition.

Manufacturers and labs all over the world depend on Alicat Scientific's high precision electronic mass flow meters and controllers and pressure meters and controllers.



EPC pressure controllers for OEM manufacturers

## Contact any of our offices worldwide.

#### **United States**

Phone:

+1 (520) 290-6060

Email:

info@alicat.com

#### China Southeast Asia

Phone:

+86-021-61519020

Email:

info-cn@alicat.com

#### India

Phone:

+91-22-46081434

Email:

info-in@alicat.com

## Europe

Phone:

+31(0)262.031.651

Email:

europe@alicat.com

